

Specifications:

 
- battery: 160mAh (0,59Wh); Li-Poly
- bluetooth: V3.0+EDR
- working time: 5h
- standby time: 60h
- works with touch screens
- fabric: 94% polyester, 6% spandex
- sizes: UNI
- weight with battery: 250g

Features:

- Bluetooth technology allows you to talk on the phone without taking it out of the pocket
- Connection with the phone is obtained using the Bluetooth technology a 10m range
- A high-quality Li-Poly battery allows for long and safe operation of the equipment
- The integrated steering panel allows for receiving and ending calls as well as remotely controlling music without the need to touch your phone
- All electronic elements may be easily removed, which allows for safe cleaning of the fabric

Cleaning and maintenance

The heating element used in is resistant to moisture. However, strong laundry detergent can cause mechanical damage of the heating element . Therefore, we recommend surface cleaning with a cloth or brush with a small amount of detergent and gentle rinsing . If you need a more powerful washing, tightly wrap the end of the power cord. Do not clean with battery connected to them !



Important:

Before first use, fully charge the battery.

If the battery is stored for long periods without use, it should be fully charged before storage and charging should be repeated every 3 months.

If there is mechanical damage to any items, immediately turn off the device and remove the battery . The defective part must be sent to the service for repair or replacement .

**RoHS
Compliant**



USER MANUAL

Charging the internal battery


Connect batteries to the charger socket and then plug the charger to the electricity outlet. Charging time is approximately 1 h.

Synchronisation with a phone

First connection - press PLAY/PAUSE for about 5 seconds – the lights will flash red and blue

Turn on Bluetooth and go to the telephone Bluetooth settings.

Choose the device when it appears on the list and wait until the status changes to “connected”.

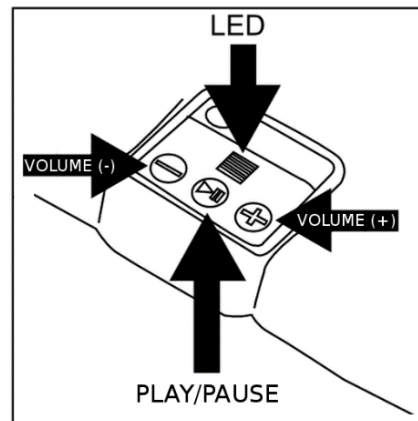

Using the device

Phone call

PLAY/PAUSE	Briefly pressing	Answer/End the call
	Pressing and holding	Turn on/Turn off
	Pressing twice	Redial the last number called
VOLUME(-)	Briefly pressing	-
	Pressing and holding	Volume down
VOLUME(+)	Briefly pressing	-
	Pressing and holding	Volume up

Listen to music

PLAY/PAUSE	Briefly pressing	Play/Pause
	Pressing and holding	Turn on/Turn off
	Pressing twice	-
VOLUME(-)	Briefly pressing	Previous track
	Pressing and holding	Volume down
VOLUME(+)	Briefly pressing	Next track
	Pressing and holding	Volume up

Caution!

Textile elements can be washed. Before washing, remove the headphones. After washing the material, reconnect the headphones.

Energy-saving mode:

The device will turn off automatically if no other device is connected to it within 3 minutes. To reconnect, press and hold PLAY/PAUSE for 3 seconds.

Low-battery alarm

In case of a low battery, the device will notify you with a double acoustic alarm. It is necessary to charge the battery then.