

Specifications:


- heating element: 4W - carbon fiber
- the heating element is located at the center of the scarf
- modes: 33% (LO), 66% (MED), 100% (HI)
- working time: 10000mAh powerbank - 10h (LO), 7h (MED), 3h (HI)
- fabric: 100% polyester
- sizes: UNI

Features:

- The heating element is constructed from carbon fibres offering extraordinary reliability and durability as well as medical properties, thanks to infrared waves
- A pocket for storing the battery offers you comfort of use every day
- A large surface area of the heating element evenly distributes the heat, soothing and heating your body

Cleaning and maintenance

The heating element used in is resistant to moisture. However, strong laundry detergent can cause mechanical damage of the heating element . Therefore, we recommend surface cleaning with a cloth or brush with a small amount of detergent and gentle rinsing . If you need a more powerful washing, tightly wrap the end of the power cord. Do not clean with battery connected to them !

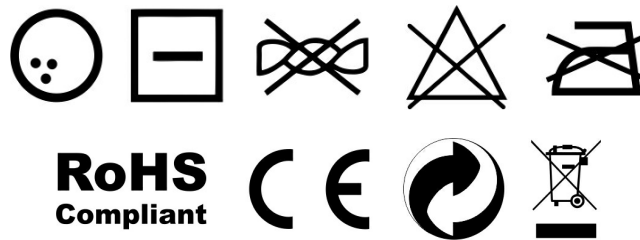

Turning on and operation

Each time before turning on, make sure that the built-in connection cable is not mechanically damaged. Also make sure that the connected battery is free of mechanical damage.

Connect the battery to the built-in cable. Place the battery in your pocket and zip it up.

To start the heating press and hold the POWER button for 2 seconds. Device will turn on with the heating power at 100%. Another short press of the POWER button toggles the heating power to 66%, 33% and again 100%, which is indicated by lighting corresponding LED lights.

To turn off the heat press and hold the POWER button



2. Turn on your power bank according to power bank's user manual

